

## Video inserter HDV-MBN7 / HDA-MBN7

**New function:  
interface reset  
via external keypad!**

**Compatible with  
Mercedes Benz vehicles  
with MBUX 2nd generation (NTG7) systems  
with 9.5, 10.25 or 11.9 inch monitor**



### Product features

- 1 x CVBS/AHD input for rear-view camera
- 1 x CVBS/AHD input for front camera
- 2 x CVBS/AHD input for side cameras or additional after-market video-sources (e.g. USB devices, DVB-T2 tuner, etc.)
- All inputs NTSC and PAL compatible  
Supported AHD resolutions 720p NTSC (30Hz), 720p PAL (25Hz), 960p NTSC (30Hz), 960p PAL (25Hz), 1080p NTSC (30Hz), 1080p PAL (25Hz)
- **HDV-MBN7 only:** 1 HDMI input for HD rear-view camera or other HDMI source (e.g. iOS/Android device, laptop, streaming stick, DVB-T2 tuner, etc.)  
Supported HDMI resolutions 720p NTSC (60Hz), 720p PAL (50Hz), 1080p NTSC (60Hz), 1080p PAL (50Hz)
- **HDV-MBN7 only:** Analogue audio output for HDMI source
- Automatic switchover to rear-view camera input while reverse gear is engaged
- Automatic front camera shift after reverse gear is engaged for 5, 10, 15 or 20 seconds
- Adjustable guide lines (fixed or movable) can be activated for rear-view camera (movable guide lines not available for all vehicles)
- Free picture while driving (only for inserted video-sources)

**Attention!**  
Video signal type of each video source must be preset in OSD-menu of corresponding video-input.

## Table of contents

<b>1</b>	<b>Before installation</b>	<b>3</b>
1.1	Scope of delivery	3
1.2	Check interface compatibility with vehicle and accessories	4
1.3	Limitations	5
1.4	Boxes and connections - Interface	6
1.5	Settings - 8-position switch bench (interface functions)	7
1.5.1	Interface video inputs V1-Left and V2-Right (Dip 1-2)	7
1.5.2	Front camera input V3-Front (Dip 3)	7
1.5.3	Rear-view camera settings (dip 4)	8
1.5.4	Connection type of the rear-view camera (Dip 5)	8
1.5.5	HDMI input* (Dip 6)	8
1.5.6	Monitor selection (Dip 7+8)	8
1.6	Settings - 4-position switch bench (CAN function - red)	9
<b>2</b>	<b>Installation</b>	<b>9</b>
2.1	Place of connection	9
2.2	Connection schema	10
2.3	Connection - picture signal cable	11
2.4	Connection - cable sets, power supply and CAN bus or analogue without CAN bus	12
2.4.1	Connection with CAN bus	13
2.4.2	Analogue connection without CAN bus	14
2.5	Power supply outputs	15
2.5.1	Connection and power supply - Video sources Rear-view camera, front camera and 2 side cameras	16
2.5.2	Connection and power supply - video sources Rear-view camera, front camera and 2 video sources	17
2.6	After-market rear-view camera	18
2.6.1	Case 1: Reverse gear signal from CAN bus	18
2.6.2	Case 2: Reverse gear signal from analogue signal	19
2.7	After-market front camera	20
2.8	After-market side cameras	21
2.8.1	Case 1: Turn signals from CAN bus	21
2.8.2	Case 2: Turn signals from analogue signal	22
2.9	HDMI rear-view camera or other HDMI sources (HDV-MBN7 only)	23
2.10	Audio insertion	24
2.11	Connection - video interface and external keypad	24
2.12	OSD menu settings	25
<b>3</b>	<b>Operating the video interface</b>	<b>29</b>
3.1	Optional: Operating the video interface via the 'HDA-RC' remote control	29
<b>4</b>	<b>Specifications</b>	<b>30</b>
<b>5</b>	<b>FAQ - Troubleshooting Interface functions - product-specific</b>	<b>30</b>
<b>6</b>	<b>FAQ - Troubleshooting Interface functions - general</b>	<b>31</b>
<b>7</b>	<b>Technical Support</b>	<b>33</b>

## Legal notice

The driver must not be distracted directly or indirectly by moving pictures while driving. This is prohibited by law in most countries/states. We therefore exclude all liability for damage to property and personal injury caused directly or indirectly by the installation and operation of this product. This product is only intended for displaying stationary menus (e.g. MP3 menu of USB devices) or pictures from (rear-view) cameras while driving.


Changes/updates to the vehicle software may impair the functionality of the interface. Software updates for our interfaces are provided to customers free of charge for up to one year after purchase of the interface. The interface must be sent in free of charge for the update. Costs for installation and removal will not be reimbursed.

## 1 Before installation

These instructions must be read before installation. Specialist knowledge is required for installation. The installation location of the interface must not be near sources of moisture or heat.

**Before final installation in the vehicle, we recommend a test run after connection to ensure that the vehicle and interface are compatible. Due to production-related changes made by the vehicle manufacturer, there is always the possibility of incompatibility.**

### 1.1 Scope of delivery

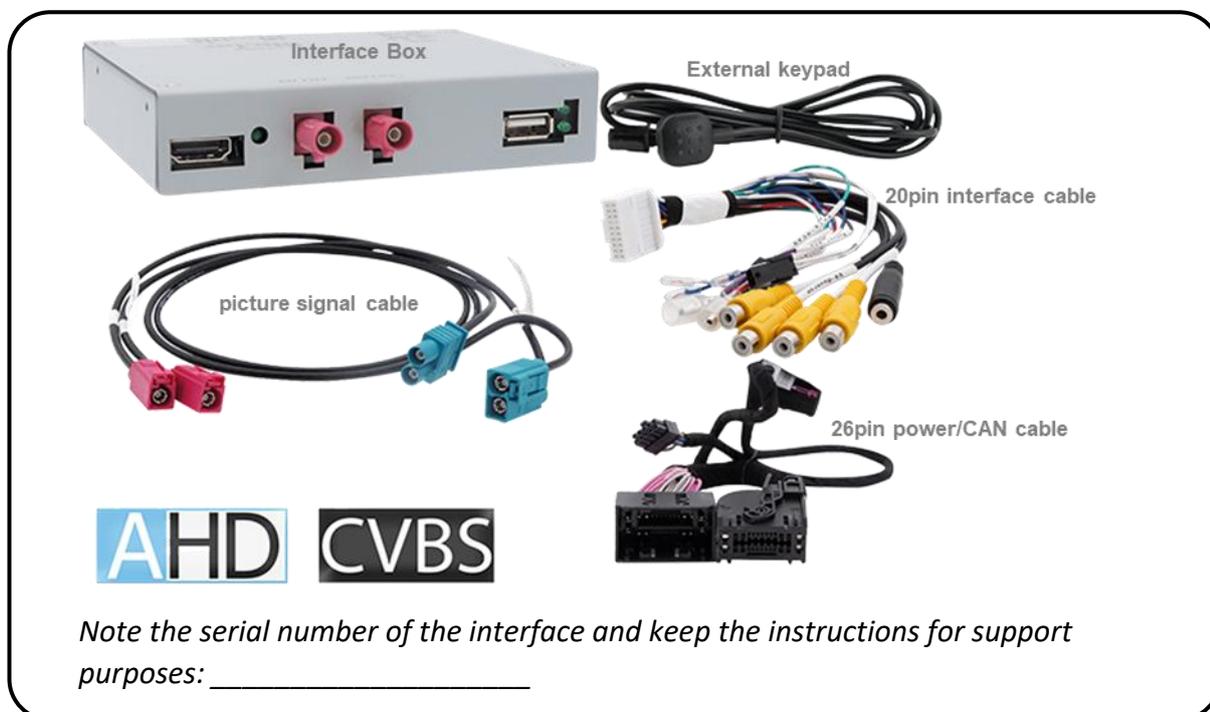

## 1.2 Check interface compatibility with vehicle and accessories

### Requirements

Manufacturer	Compatible vehicle models	Infotainments
Mercedes Benz	C-Class (W206) 06/2021-, C-Class T-model/station wagon (S206) 06/2021-, C-Class All-Terrain (X206) 10/2021-, Citan (W420) 04/2024-, CLE Coupé (C236) 11/2023-, CLE Convertible (A236) 2024-, E-Class (W214) 08/2023-, E-Class T-model/station wagon (S214) 08/2023-, E-Class All-Terrain (X214) 09/2023-, EQE (V295) 03/2022-, EQE SUV (X294) 12/2022-, EQS (V297) 08/2021-, EQS SUV (X296) 08/2022-, GLC Coupé (C254) 07/2023-, GLC SUV (X254) 07/2022-, GT AMG Coupé (C192) 10/2023-, SL AMG (R232) 11/2021-, T-Klasse (W420) ab 08/2024	<p style="text-align: center;"><b>MBUX2 NTG7 multimedia system with 9.5 or vertical 11.9 inch monitor</b></p>
	Sprinter (W907/W910) from model year 2024, Vito (W447) from model year 2024	<p style="text-align: center;"><b>MBUX2 NTG7 multimedia system with 10.25 inch monitor</b></p>

## 1.3 Limitations


### Limitations

<i>CAN bus compatibility</i>	<p>The CAN bus compatibility of the interface may be limited completely or for individual functions in some vehicles. This may be noticeable both during installation and later.</p> <p>The interface with all video inputs can be operated with analogue switching signals without connection to the vehicle CAN bus. In this case, individual additional functions are omitted, see chapter 2.4.2 <i>Analogue connection without CAN bus</i>.</p>
<i>Video only</i>	<p>Interface <b>does not</b> insert any <b>audio signals</b>. In order to insert audio signals, any existing factory audio AUX input or optional products must be used. For HDMI source, the audio is output via an analogue audio output (3.5mm jack socket).</p>
<i>Factory rear-view camera</i>	<p>Automatic switching to rear-view camera input only takes place while reverse gear is engaged. Optional accessories are required for different switching times.</p>
<i>After-market front camera</i>	<p>Switching to front camera occurs automatically after shifting into reverse gear for 5, 10, 15 or 20 seconds (depending on the OSD menu setting). Manual switching to front camera is also possible via the external keypad.</p>
<i>Guide lines for rear-view camera</i>	<p>If the vehicle CAN bus is not fully compatible with the interface or if the connection is analogue, the movable guide lines function cannot be used.</p>
<i>Vehicles with active Parking assistant system 235</i>	<p>It is not possible to display the camera image while the factory-fitted active parking assistant system 235 is in use.</p>



## 1.5 Settings - 8-position switch bench (interface functions)

Interface box, right side, black

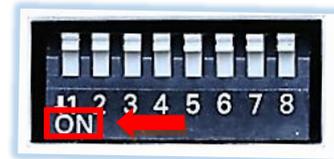

Dip position **UP = OFF** and **DOWN = ON**

Dip	Function	ON (down)	OFF (up)
1	Video 1 / V1-Left	activated	deactivated
2	Video 2 / V2-Right	activated	deactivated
3	Front camera / V3 front	activated*	deactivated
4	Type of rear-view camera (V4-Rear)	After-Market	Plant or none
5	Connection type of the After-market rear-view camera*	HDMI*	V4-Reverse (CVBS/AHD)
6	HDMI input*	activated	deactivated
7	Monitor selection*	9.5 inch monitor	10.25 inch monitor 11.9 inch monitor
8	Monitor selection*	9.5 inch monitor 10.25 inch monitor	11.9 inch monitor

**Power reset interface after each dip change to activate changes!**

\* Switching to front camera takes place automatically for 5, 10, 15 or 20 seconds (depending on the OSD menu setting) after shifting into reverse gear.

\* With **HDA-MBN7**, dip 5 and dip 6 have no function. Set both to **OFF**.

\* **If the camera picture and/or the inserted video or other functions are not working properly, press the external keypad for 10 seconds to reset the interface.**

See following chapters for detailed information about 8dip switch bench.

### 1.5.1 Interface video inputs **V1-Left** and **V2-Right** (Dip 1-2)

With Dip 1 (Dip 2) = **ON**, the CVBS/AHD input **V1-Left** (**V2-Right**) is activated for side camera or other video sources. Only activated video inputs can be accessed - both with automatic and manual switching. It is recommended to only activate used inputs, to avoid accidental switching.

### 1.5.2 Front camera input **V3-Front** (Dip 3)

If Dip 3 = **ON**, the interface switches to the CVBS/AHD front camera input **V3-Front** after the reverse gear is engaged. In addition, manual switching to the front camera input is possible from any picture mode using an external keypad (short press).

In the OSD menu settings, the automatic display time of the front camera can be selected between 5; 10; 15 or 20 seconds or switched off. Another video source could then also be connected to instead of a front camera.

### 1.5.3 Rear-view camera settings (dip 4)

If dip 4 = **OFF**, the interface switches to the factory image for the existing factory rear-view camera or factory PDC display as long as reverse gear is engaged.

If Dip 4 = **ON**, the interface switches to its CVBS/AHD rear-view camera input **V4-Reverse** (provided Dip 5 is set to **OFF**) or the **HDMI input\*** (provided Dip 5 and Dip 6 are set to **ON**) when reverse gear is engaged.

**Note:** **V4 reverse** remains without function when dip 5 = ON, using an HDMI camera.

### 1.5.4 Connection type of the rear-view camera (Dip 5)

Dip 5 = **ON** selects the **HDMI input\*** as the rear-view camera input. In addition, the **HDMI input\*** input must be activated with dip 6 = **ON**. Dip

5 = **OFF** selects the V4 -Reverse input as the rear-view camera input.

**Note:** The automatic switchover to front camera for the preset time is given in both cases after engaging while reverse gear is engaged.

### 1.5.5 HDMI input\* (Dip 6)

With dip 6 = **ON**, the **HDMI input\*** is activated and can be used for various HDMI sources (e.g. rear-view camera or 360° camera system, smartphone, laptop, streaming stick, DVB-T2 tuner, etc.) . For rear-view camera/360° camera system, dip 5 = **ON**.

With dip 6 = **OFF**, the **HDMI input\*** is deactivated.

### 1.5.6 Monitor selection (Dip 7+8)

Dips 7 and 8 are used to set the size of the monitor.


Monitor size	Dip 7	Dip 8
9.5 inch monitor	ON	ON
10.25 inch monitor	OFF	ON
11.9 inch monitors	OFF	OFF

\* **HDMI input only available with HDV-MBN7**

**Power reset interface after each dip change to activate changes!**

## 1.6 Settings - 4-position switch bench (CAN function - red)

*Interface box, right side, red*

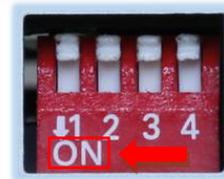

Set the DIP switch positions according to the following table.

Dip position **UP=OFF** and **DOWN=ON**

Vehicle/Navigation	Dip 1	Dip 2	Dip 3	Dip 4
All vehicles	OFF	OFF	OFF	OFF
Vehicles with alternative CAN bus speed	OFF	OFF	<b>ON</b>	OFF
Vehicles with Active Parking Assistant System 235	<b>ON</b>	OFF	OFF	OFF

**Note:** No camera image is available while the active parking assistant system 235 is in use.

**Power reset interface after each dip change to activate changes!**

## 2 Installation

**Switch off the ignition and disconnect the vehicle battery according to the factory specifications!**

**If the vehicle battery must not be disconnected according to the factory specifications, in most cases it is sufficient to put the vehicle into sleep mode. If this does not work, disconnect the vehicle battery with a resistor cable.**

**Before final installation, we recommend a test run of the interface with all connected devices to ensure that all parts are compatible. Due to possible changes in the vehicle manufacturer's production at any time, incompatibility can never be ruled out.**

**As with every installation of retrofit devices, a quiescent current test of all retrofitted devices must be carried out after installation to ensure that the devices are switched off to standby mode in vehicle sleep mode.**


### 2.1 Place of connection

The installation location of the MBUX 2nd generation (NTG7) head unit, to which the connection is made, varies depending on the vehicle model.

**Examples:**


- A-Class (W177), B-Class (W247), CLA (C118/X118), GLA (H247):  
on the A-pillar on the driver's side
- GLE (W167 and C167):  
under the passenger seat
- Sprinter (W907/910):  
behind the factory monitor
- Citan/T-Class W420:  
behind the glove compartment

## 2.2 Connection schema

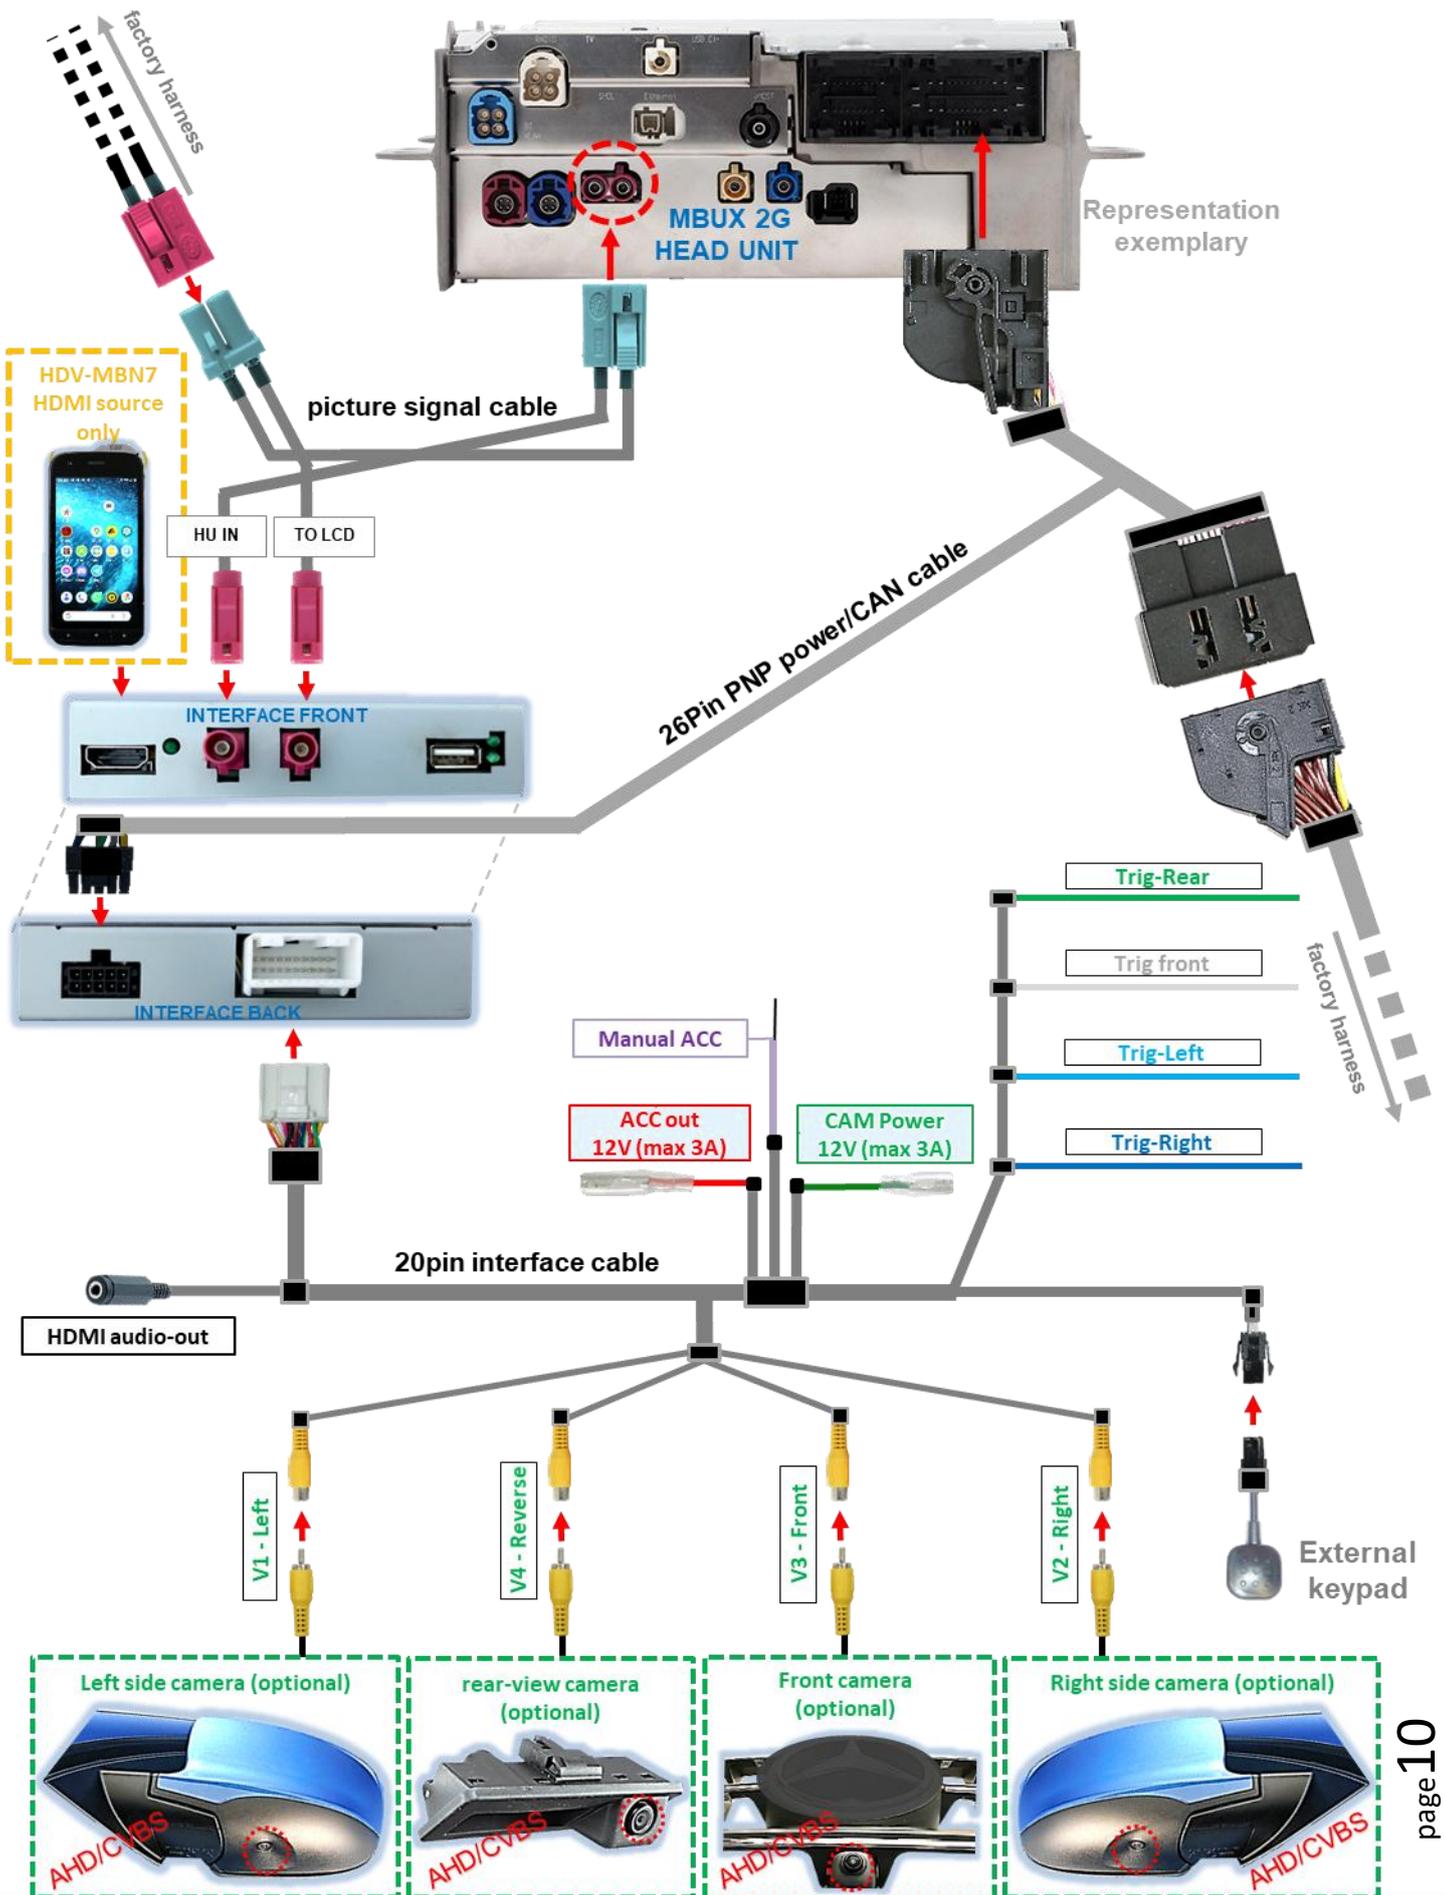

### 2.3 Connection - picture signal cable

 Attention: The picture signal cable is only connected to the double Fakra of the head unit, even if it is only used on one side!

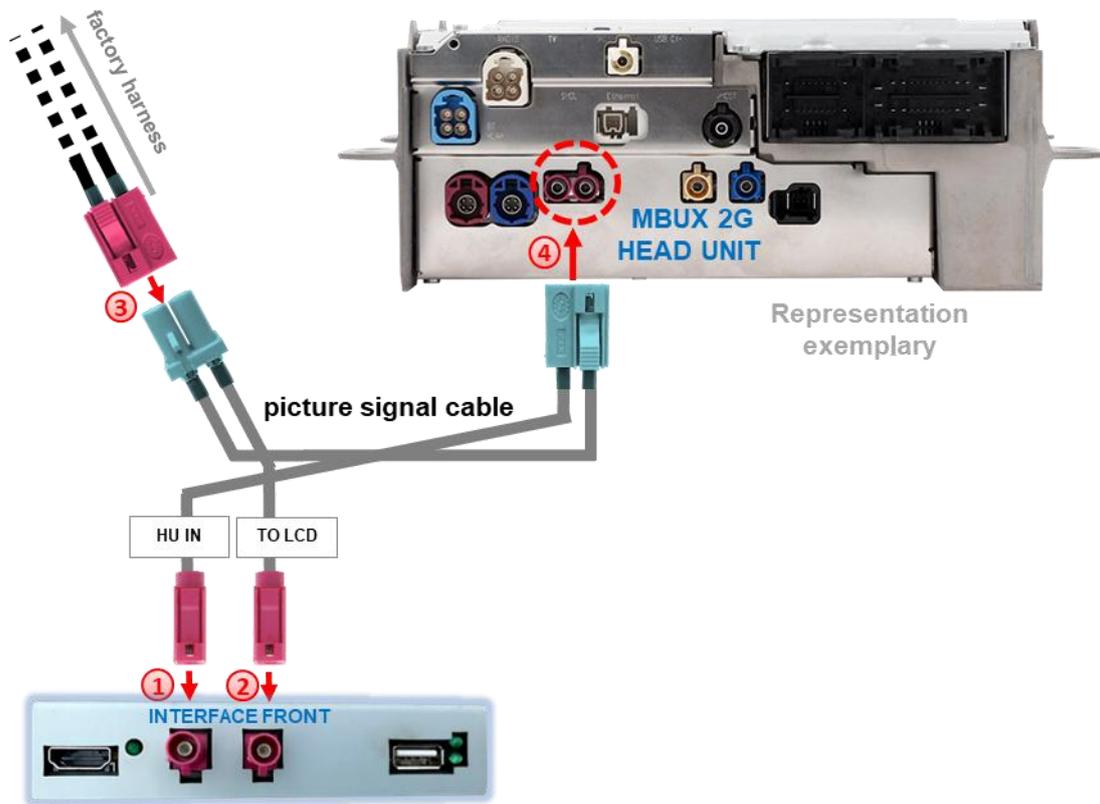


-  Connect the **bordeaux** Fakra female connector "HU IN" of the supplied picture signal cable to the **bordeaux** Fakra male connector "HU IN" of the video interface.
-  Connect the **bordeaux** Fakra female connector "TO LCD" of the supplied picture signal cable to the **bordeaux** Fakra male connector "TO LCD" of the video interface.
-  Disconnect the double Fakra female connector of the factory picture signal cable from the **pink-bordeaux** double Fakra male connector of the head unit and connect it to the **water blue** double Fakra male connector of the picture signal cable supplied.
-  Connect the **water-blue** double Fakra female connector of the supplied picture signal cable to the **pink-bordeaux** double Fakra male connector of the head unit.

 **Attention:** The picture signal cable is only connected to the double Fakra of the head unit, even if it is only used on one side!



### 2.4.1 Connection with CAN bus

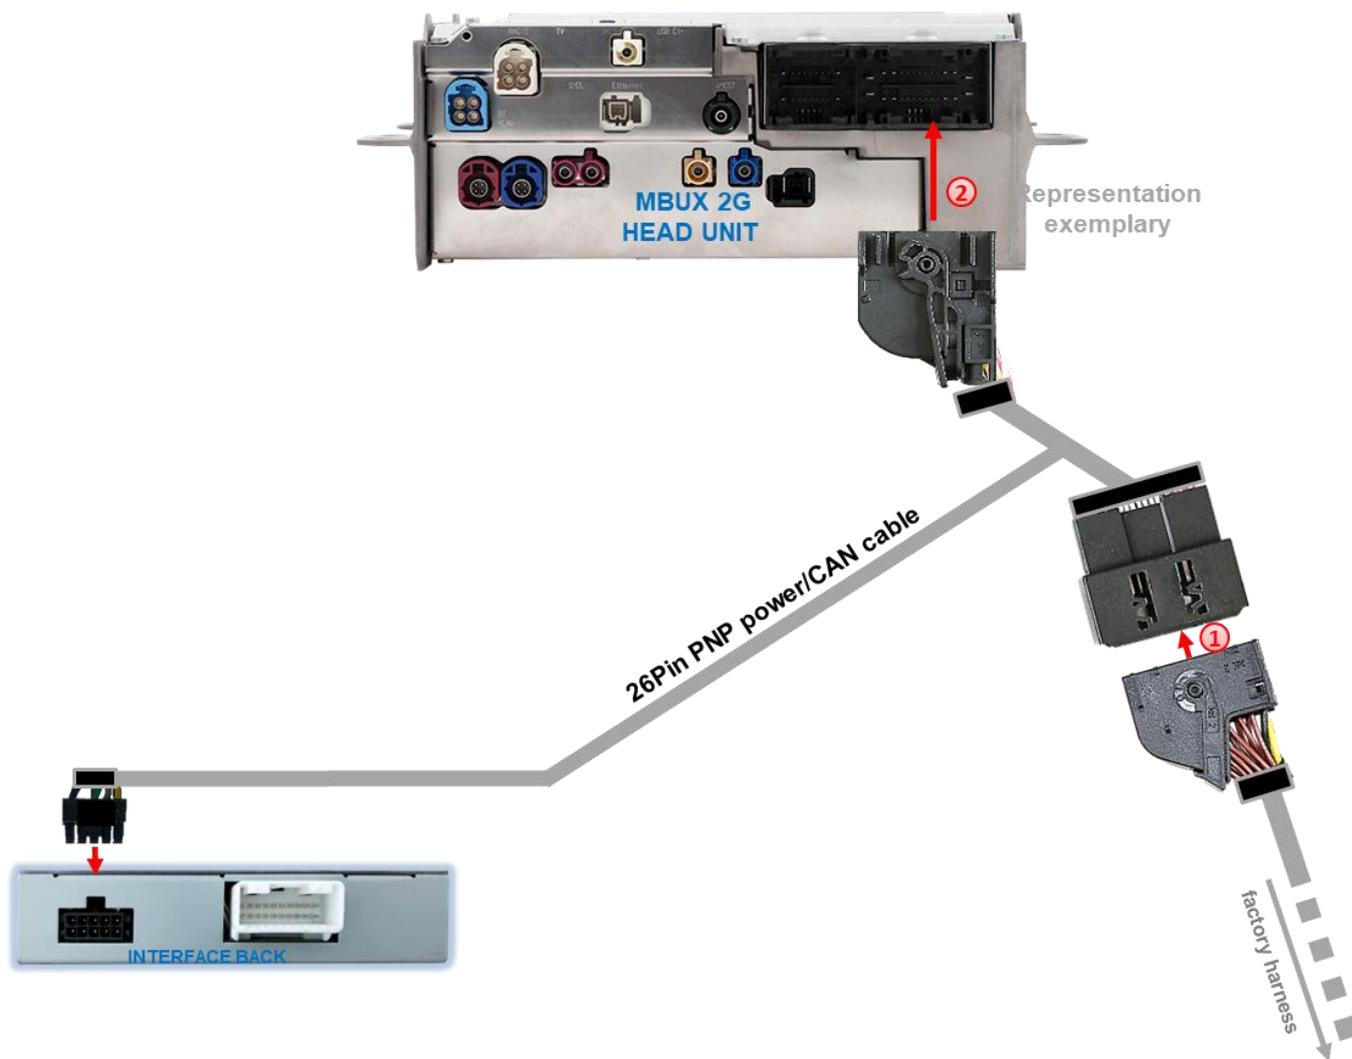


- 1 Disconnect the 26pin female connectors of the vehicle wiring harness at the rear of the head unit and connect them to the 26pin male connectors of the 26pin PNP power/CAN cable.
- 2 Connect the 26pin female connectors of the 26pin PNP power/CAN cable to the previously vacated 26pin male connector of the head unit.

**Attention!**  
In exceptional cases, CAN communication is not (fully) compatible. If no interface LED lights up after connecting the 26-pin PNP power/CAN cable set when the ignition is switched on, the analogue connection described below must be made.

### 2.4.2 Analogue connection without CAN bus

With analogue connection, the two CAN wires of the 26pin PNP power/CAN cable are not connected - the two wires of the 26pin PNP power/CAN cable must be disconnected for this!

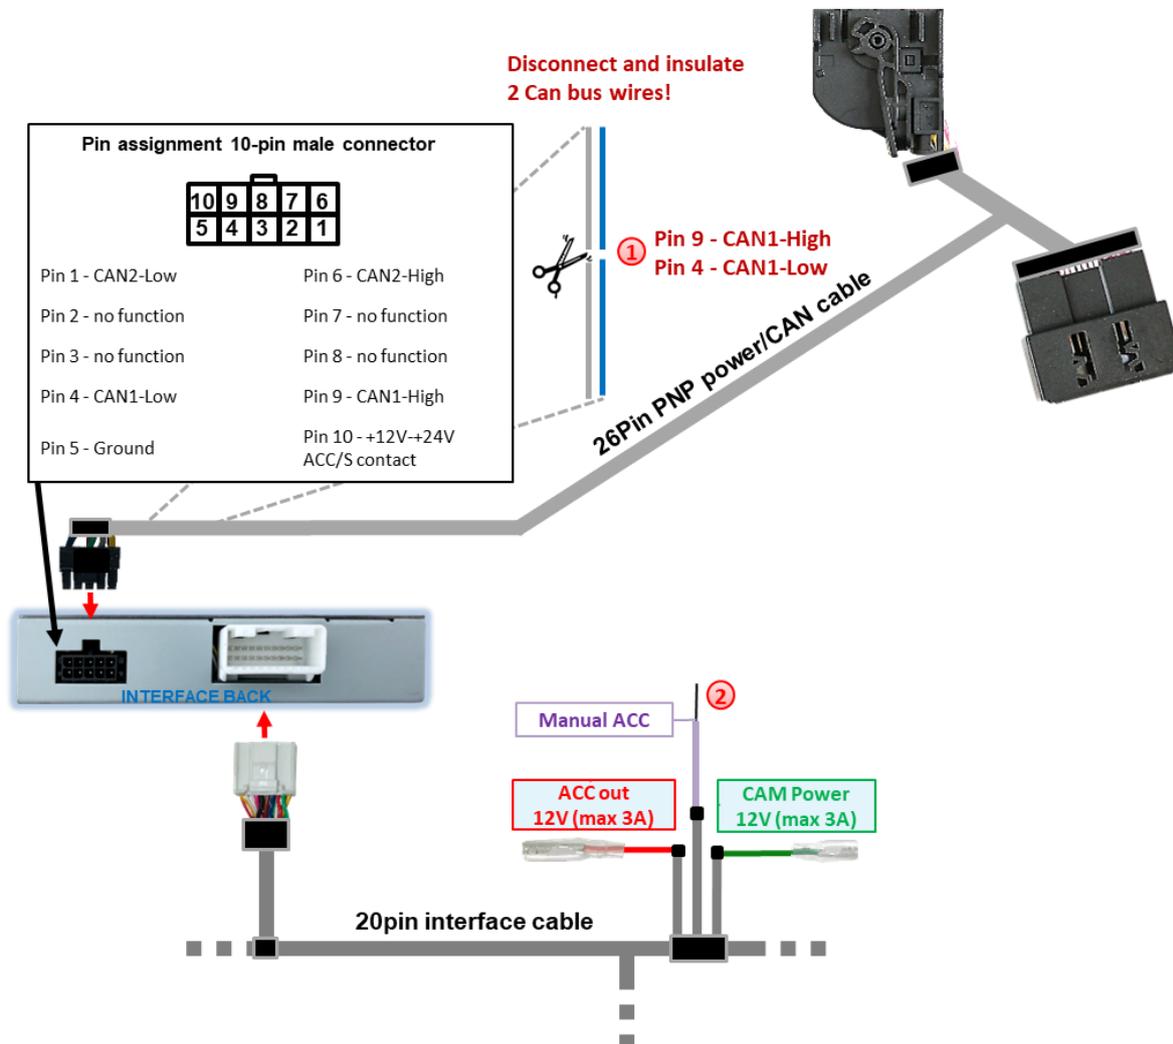

- ① Disconnect and insulate the 2 CAN bus wires (grey, blue) of the 26pin PNP power/CAN cable approx. 4-5 cm behind the black male connector.
- ② Connect the violet wire **Manual ACC** of the 26pin PNP power/CAN cable to the **+12V-+24V S contact (terminal 86s) or ACC terminal 15r** (e.g. cigarette lighter, glove compartment lighting).


#### Notes

- The screen is only switched on as long as the video interface is switched on via +12V on **Manual ACC**. Otherwise, the factory picture is also black. When selecting the switch-on signal, it must be checked whether the factory picture is available in all desired operating states.
- The display of movable guide lines for rear-view camera is omitted with analogue connection.
- If the interface is connected analogue (without CAN bus), the rear-view camera and side cameras must also be connected analogue.  
see points:  
2.6.2 Case 2: Reverse gear signal from analogue signal  
2.8.2 Case 2: Turn signals from analogue signal



### 2.5 Power supply outputs

The two **red** and **green** power supply lines **ACC out 12V (max 3A)** and **CAM Power 12V (max 3A)** of the **20pin interface cable** can either be used as ACC power supply for the **external video sources** (e.g. iOS/Android devices, laptop, streaming stick, DVB-T2 tuner) connected to **V1-Left, V2-Right, V3-Front or HDMI input\***, or as power supply for the after-market cameras (e.g. side, front and rear view camera) connected to **V1-Left, V2-Right, V3-Front, V4-Reverse or HDMI input\*** (e.g. side, front and rear-view cameras).

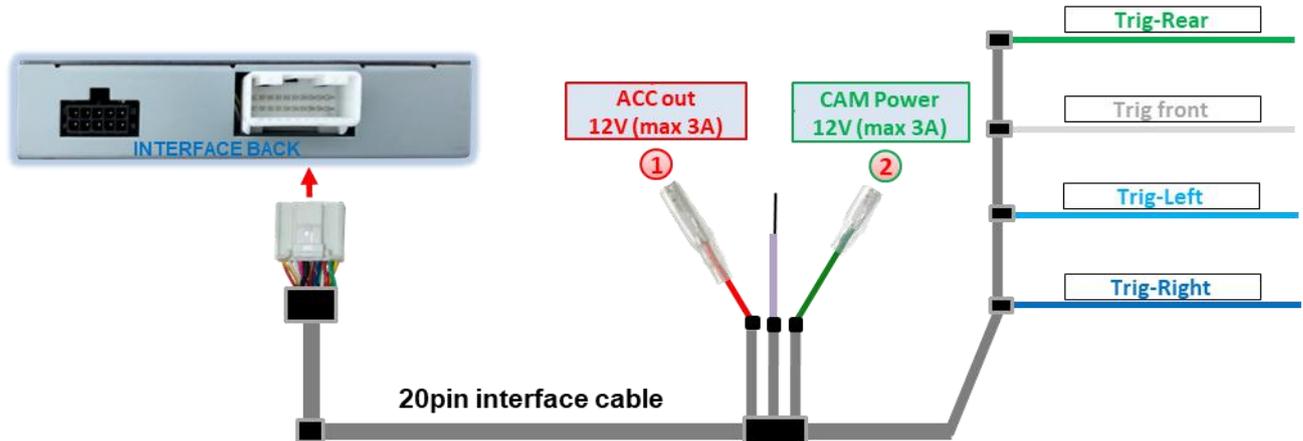


- 1 **External video sources** (no cameras) can be supplied with power via the red **ACC out 12V (max 3A)** power supply line of the **20pin interface cable**.  
The wire carries a **permanent** +12V ACC switching output current while the interface is switched on (see the following chapter for connection diagrams).
- 2 The power supply for **after-market cameras** (e.g. rear-view, side and front cameras) can be provided via the green **CAM Power 12V (max 3A)** power supply line of the **20pin interface cable**. The wire carries **+12V switching output current** only as long as one of the camera inputs is displayed, regardless of whether the connection is made via the vehicle CAN bus or via one of the trigger wires (see the following chapter for connection diagrams).

\* **HDMI input only available with HDV-MBN7**

### 2.5.1 Connection and power supply - Video sources

Rear-view camera, front camera and 2 side cameras

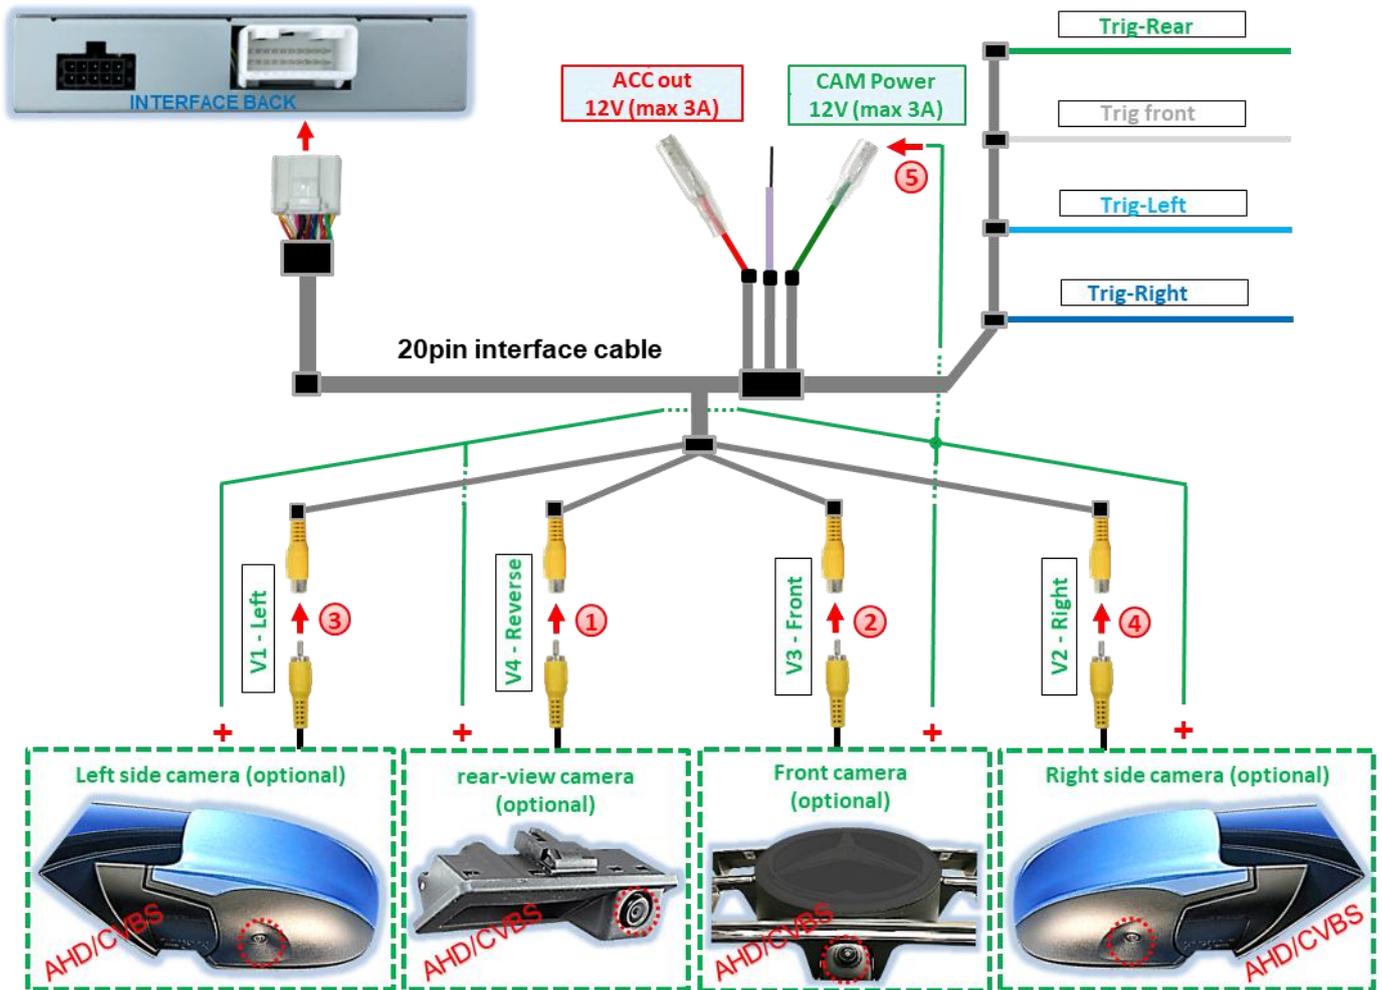


- ① Connect the RCA male connector of the rear-view camera to the **V4 reverse** RCA female connector of the 20pin interface cable.
- ② Connect the RCA male connector of the front camera to the RCA **V3 front** female connector of the 20pin interface cable.
- ③ Connect the RCA male connector of the left side camera to the RCA female connector **V1-Left** of the 20pin interface cable.
- ④ Connect the RCA male connector of the right side camera to the RCA female connector **V2-Right** of the 20pin interface cable.
- ⑤ Connect the power supply for all after-market cameras to the **green wire CAM Power 12V (max 3A)** of the 20pin interface cable.



**Note:** The type of camera selection (via vehicle CAN bus or trigger lines) can be preset individually for each input in the OSD menu settings.

**Attention!**  
Video signal type of each video source must be preset in OSD-menu of corresponding video-input.

### 2.5.2 Connection and power supply - video sources Rear-view camera, front camera and 2 video sources

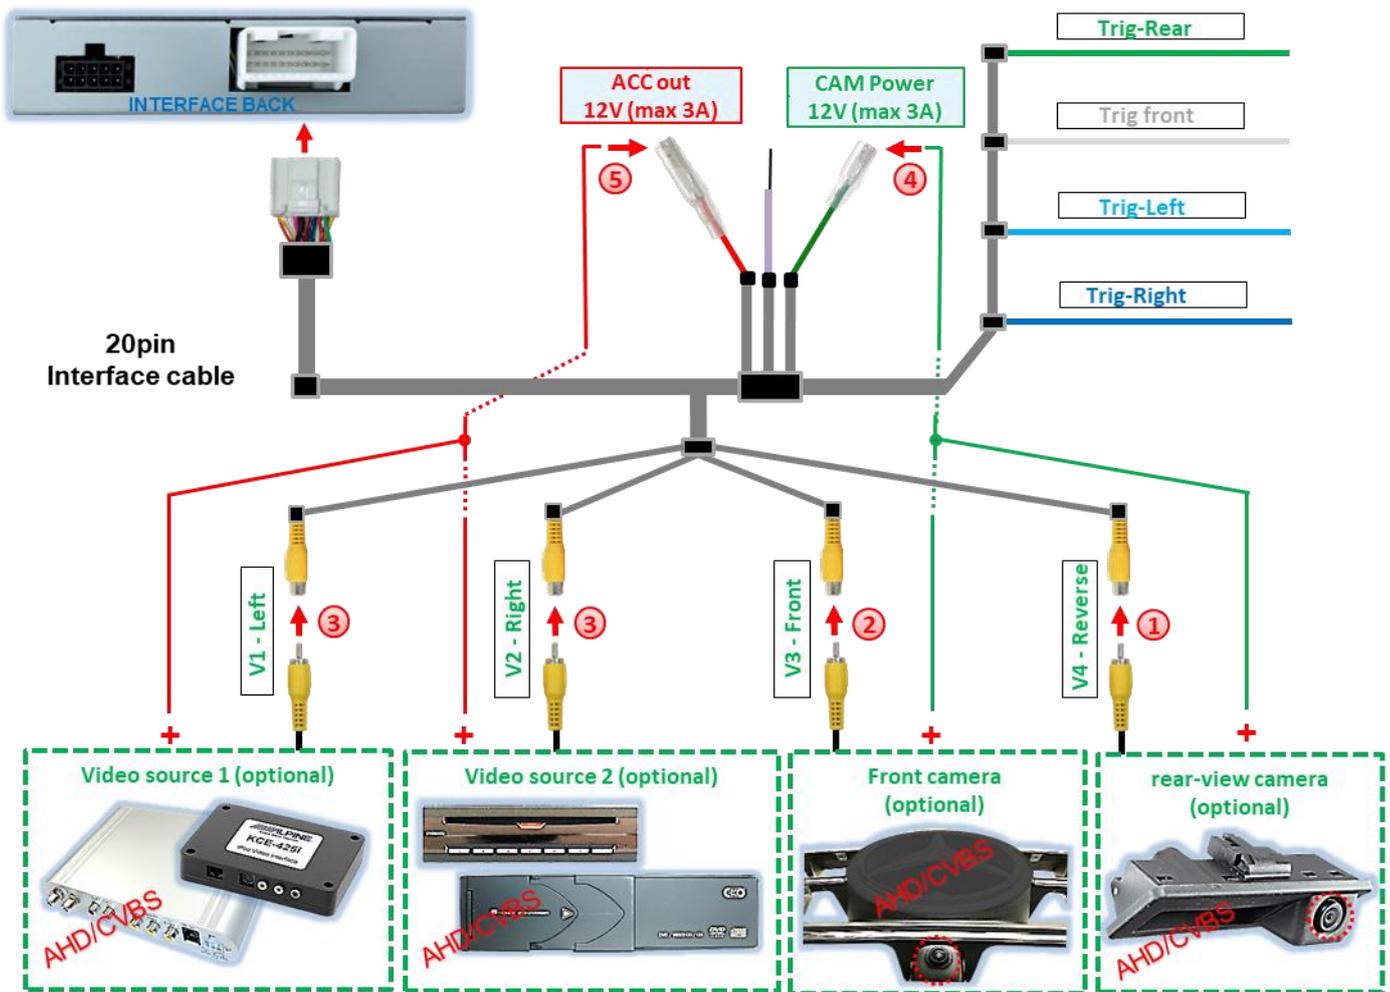

- ① Connect the RCA connector of the rear-view camera to the RCA socket V4-Reverse of the 20pin interface cable .
- ② Connect the RCA male connector of the front camera to the RCA female connector V3-Front of the 20pin interface cable.
- ③ Connect the RCA connectors of video sources 1 and 2 to the RCA connectors V1-Left and V2-Right of the 20pin interface cable.
- ④ The power supply for after-market cameras on the **green wire CAM Power 12V (max 3A)** of the 20pin interface cable.
- ⑤ Connect the power supply for video sources to the **red wire ACC out 12V (max 3A)** of the 20pin interface cable.



**Note:** The type of camera selection (via vehicle CAN bus or trigger lines) can be preset **individually** for each input in the OSD menu settings.

**Attention!**  
Video signal type of each video source must be preset in OSD-menu of corresponding video-input.


### 2.6 After-market rear-view camera

Automatic switching to rear-view camera can be carried out via the CAN bus or an analogue +12V reverse gear signal.

#### 2.6.1 Case 1: Reverse gear signal from CAN bus

The basic requirement is that the interface connection is made with CAN bus. Furthermore, the vehicle CAN bus reverse gear signal and detection by the interface must be compatible. Then the interface supplies +12V power while reverse gear is engaged on the **green wire CAM Power 12V (max 3A)** of the **20pin interface cable** and the interface automatically switches to the rear-view camera input V4-Reverse or the **HDMI input\***.

See also chapter 1.5 Settings - 8-position switch bench (interface functions).

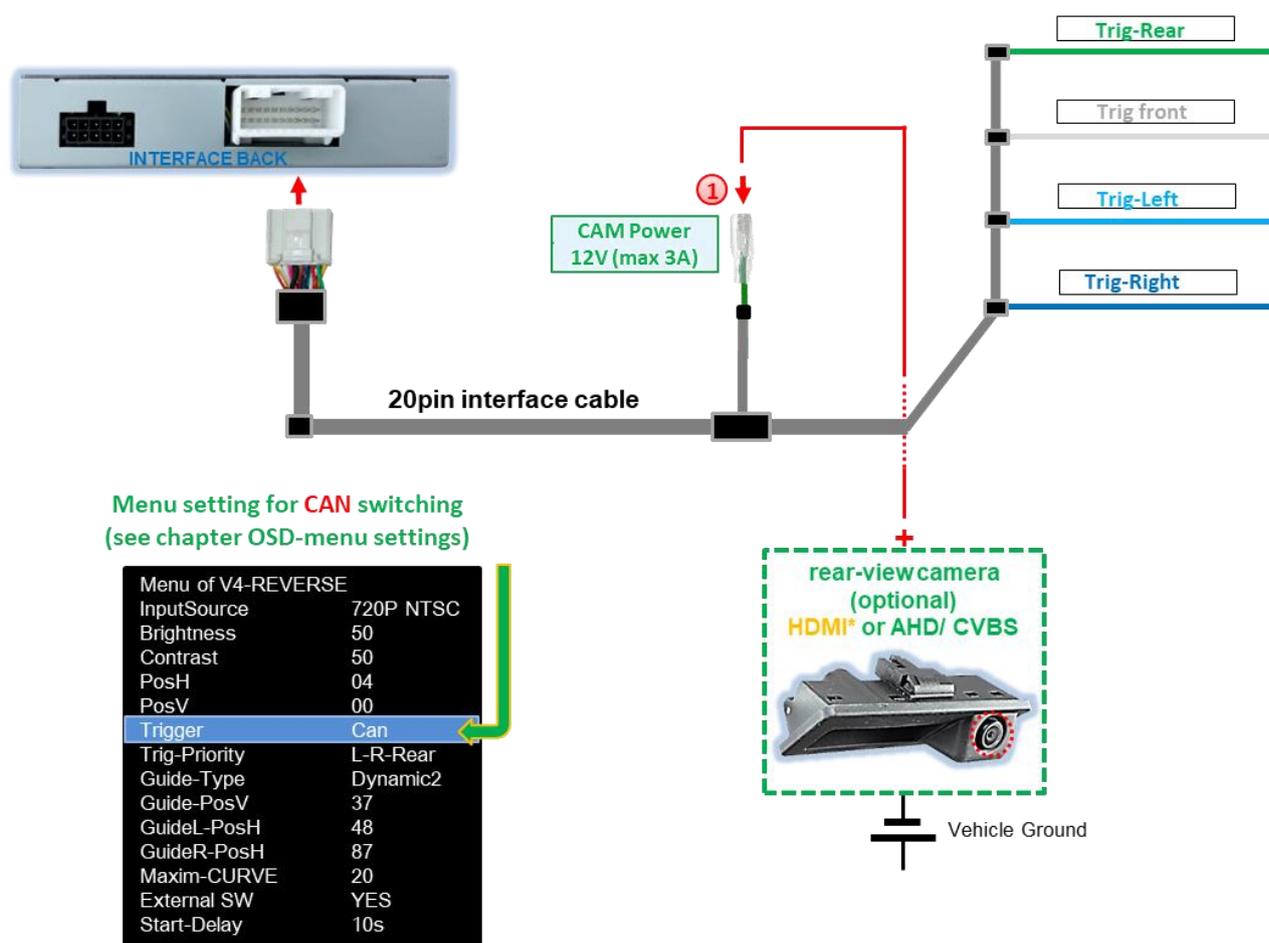

**1** The +12V power supply for the after-market rear-view camera can be provided via the **green wire CAM Power 12V (max 3A)** of the **20pin interface cable**, as voltage is only present on this wire when one of the video inputs is active (some cameras are not suitable for continuous operation).


#### Notes

- If the **HDMI input\*** is defined as the rear-view camera input, the **V4 reverse** input has no function!
- If the reverse gear detection of the interface on the CAN bus does not work, the reverse gear signal must be connected analogue.

\* **HDMI input only available with HDV-MBN7**

### 2.6.2 Case 2: Reverse gear signal from analogue signal


When connected the interface without CAN bus or when connected with CAN bus, if reverse gear is engaged and the interface does not provide +12V on the **green wire CAM Power 12V (max 3A)** of the **20pin interface cable** (not all vehicles are compatible), an external reversing light switch signal is required. As the power supply of reverse gear light is not voltage-stabile all the time, a normally open relay (e.g., AC-MR-312 or AC-MR-201) or filter (e.g., AC-PNF-RVC) is required. The diagram below shows the connection with relay.

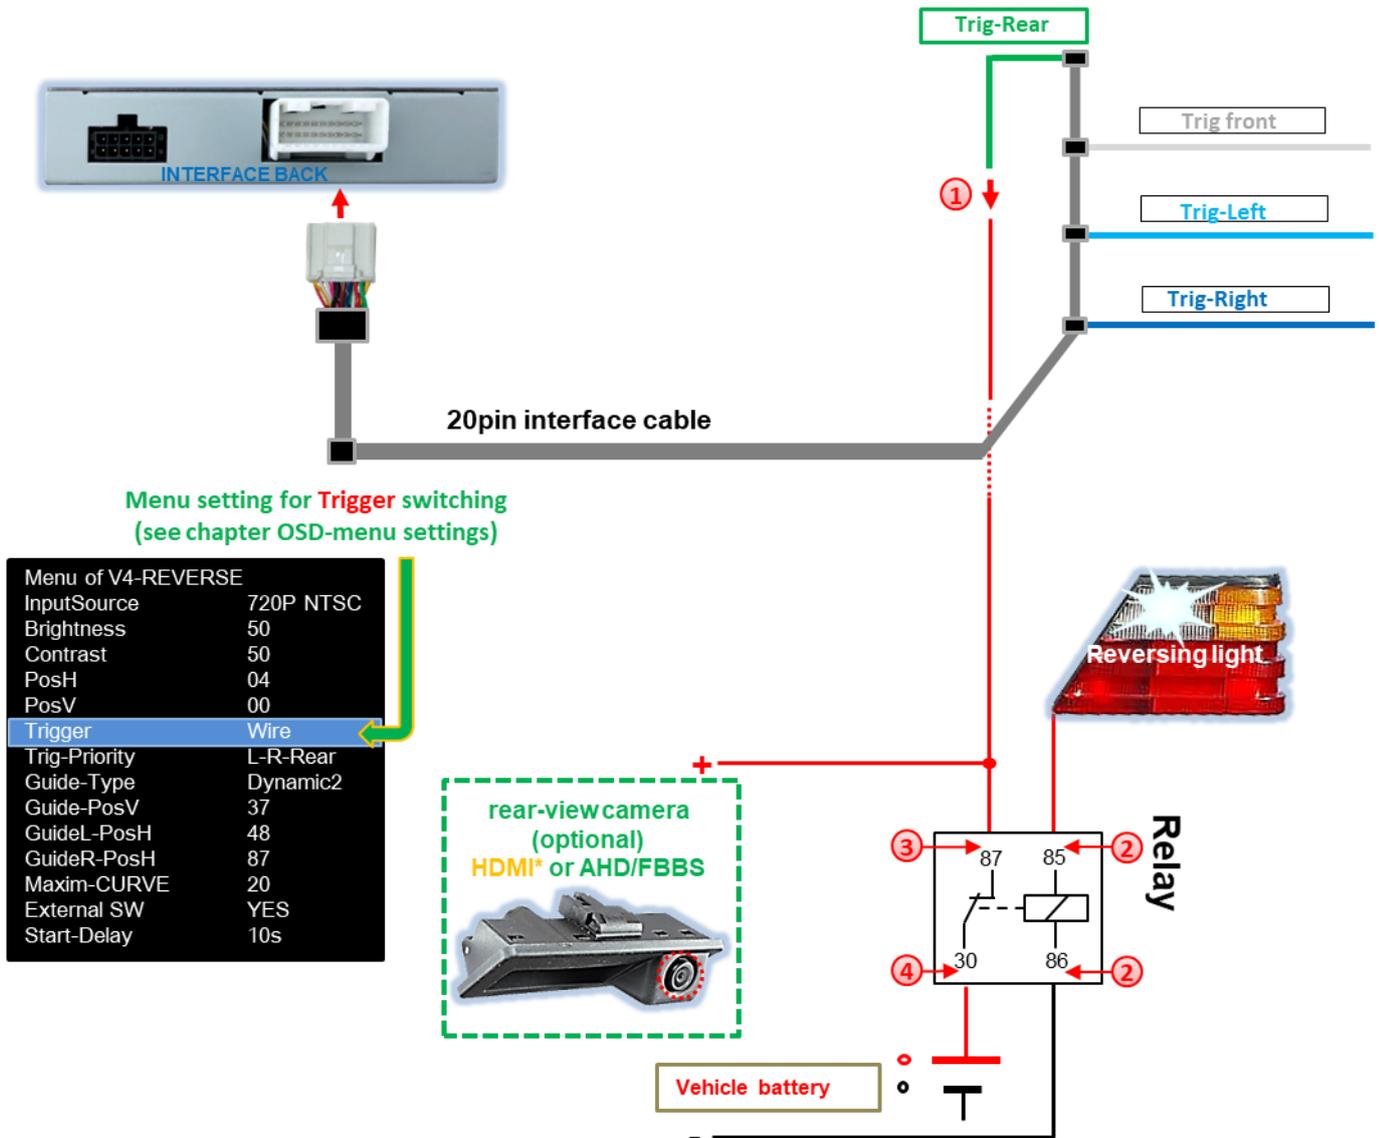

- ① Connect the **green wire Trig-Rear** to the output terminal (87) of the relay.
- ② Connect the reversing light connection cable to the switching coil terminal (85) and the vehicle Ground to the switching coil terminal (86) of the relay.
- ③ Connect the rear-view camera power supply wire to the output terminal (87) of the relay, in addition to the **green Trig-Rear wire**.
- ④ Connect continuous voltage +12V to the input terminal (30) of the relay.

\* HDMI input only available with HDV-MBN7

### 2.7 After-market front camera

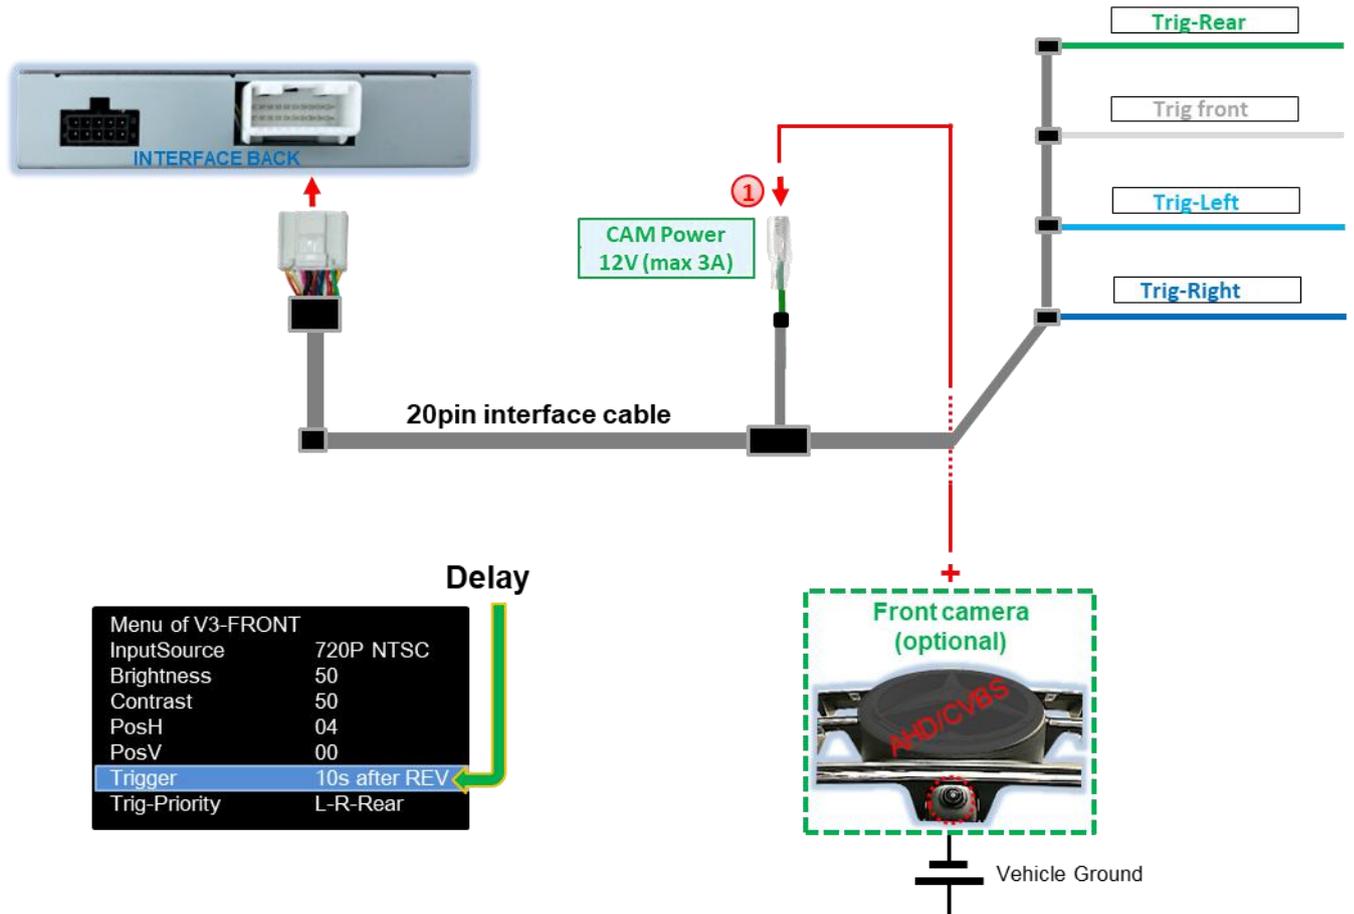

**1** The **green CAM Power 12V (max 3A) wire** can be used to supply power to the front camera . This is only energised for the duration of the activation of one of the video inputs (some cameras are not suitable for continuous operation). Requirements for using the front camera is **Dip 3 = ON** (black 8 switch bench). The delay time can be selected in the OSD menu settings of the front camera for **5, 10, 15** or **20** seconds.

Switching to front camera after engaging reverse gear for the time set in the OSD menu takes place both with reverse gear signal from CAN bus and with analogue connection.




**Note:** In addition, manual switching to front camera input (short press) is possible from any picture mode using an external keypad (see chapter 3 Operating the video interface).

### 2.8 After-market side cameras

Side cameras can be connected with activation via CAN bus or analogue.

#### 2.8.1 Case 1: Turn signals from CAN bus

The basic requirement is that the interface connection is made via CAN bus. In addition, the vehicle turn signals from the CAN bus must be recognised by the interface. Then +12V is present on the **green CAM Power 12V (max 3A)** of the 20pin interface cable for the duration of turn signal operations (right/left).

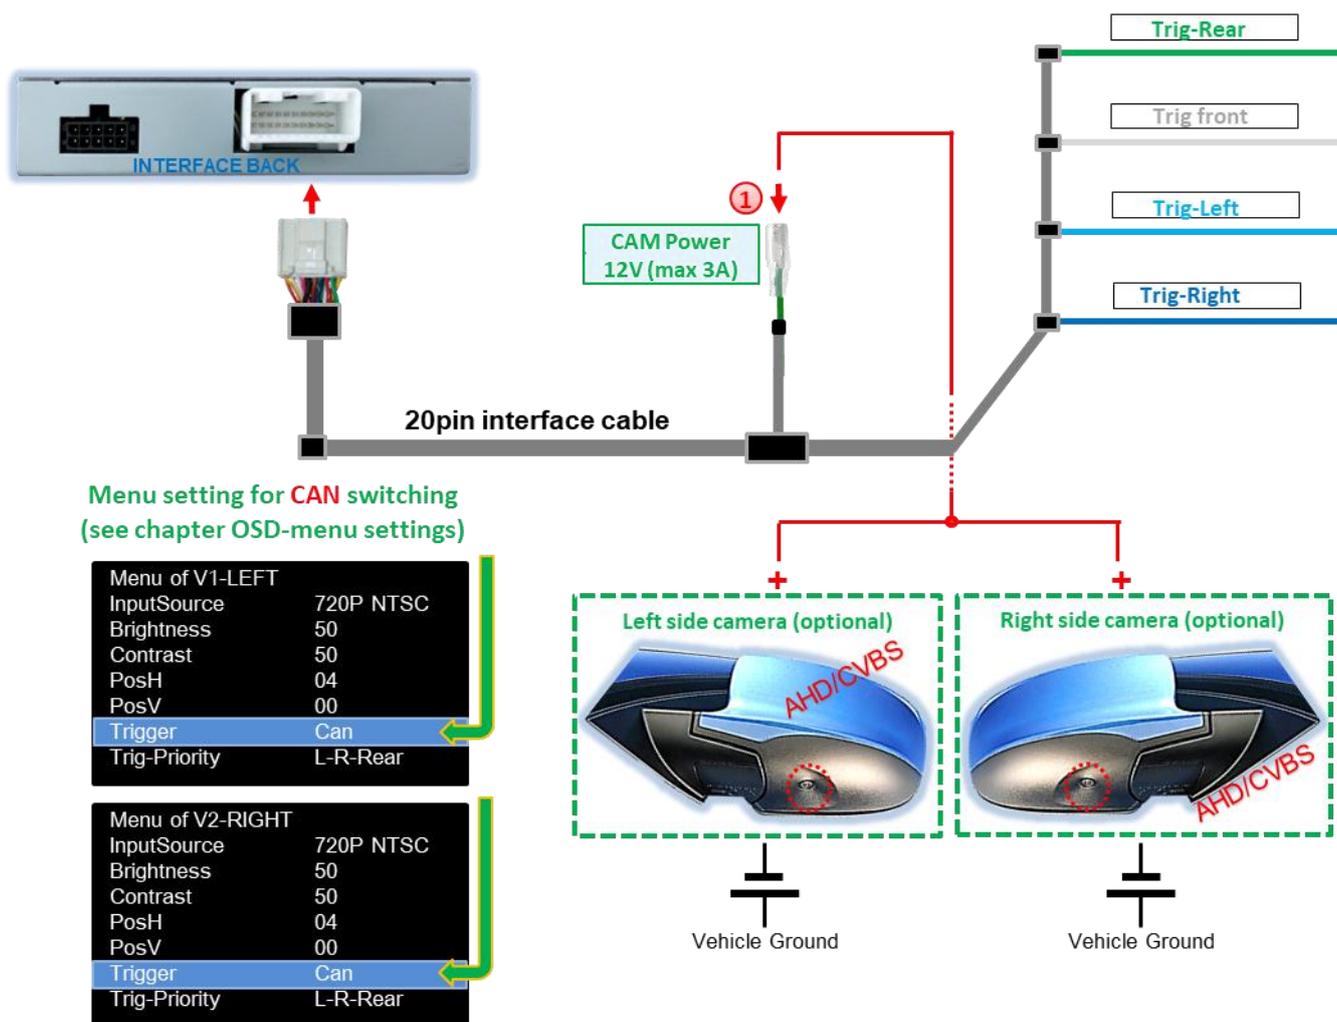


**1** The power supply for the side cameras can be supplied via the **green CAM Power 12V (max 3A)** of the 20pin interface cable, as this wire is only energised during an active video input (some cameras are not suitable for continuous operation).

**Note:** If the turn signal detection of the interface on the vehicle CAN bus does not work, the turn signals must be connected in analogue form.

### 2.8.2 Case 2: Turn signals from analogue signal


When the interface is connected without CAN bus or when the interface is connected with CAN bus and the turn signals from the vehicle CAN bus are not recognised, an analogue activation of the side camera inputs is possible via the +12V switching input wires **Trig-Left** and **Trig-Right**. For switching to the side-camera inputs, an external switching signal from the turn signal bulb is required. Since the turn signal may contain electronic interference, for each input, a normally open relay (e.g., AC-RW-1230 with wiring AC-RS5) or a noise filter (e.g., AC-PNF-RVC) is required. The diagram below shows the connection of a normally open relay.

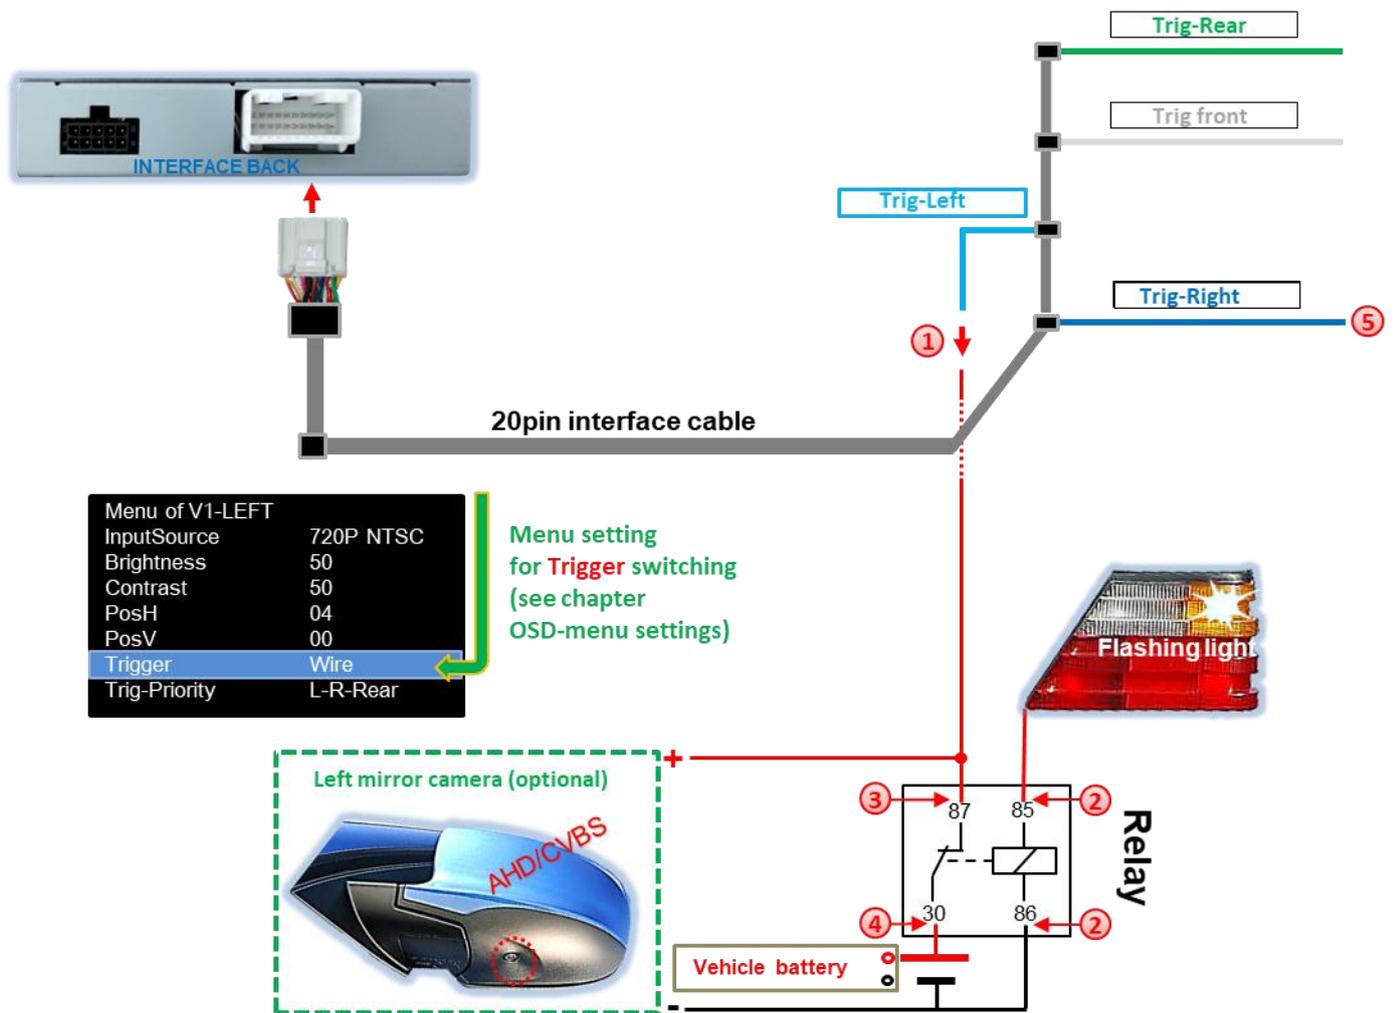

- ① Connect the **light blue wire Trig-Left** to the output terminal (87) of the relay.
- ② Connect the flashing light power cable of the left-hand flashing light to the switching coil terminal (85) of the relay and the vehicle ground to the switching coil terminal (86) of the relay.
- ③ Connect the left side camera power cable to the output terminal (87) of the relay, in addition to the **light blue Trig-Left wire**.
- ④ Connect continuous current +12V to input terminal (30) of the relay.
- ⑤ The same connection method applies to the right side camera via the **dark blue Trig-Right wire**.

### 2.9 HDMI rear-view camera or other HDMI sources (HDV-MBN7 only)

The **HDMI input\*** of the interface can generally be used for any video source connected to it with HDMI output (e.g. rear-view camera, 360° camera system or other video source such as smartphone, laptop, streaming stick DVB-T2 tuner, etc.).

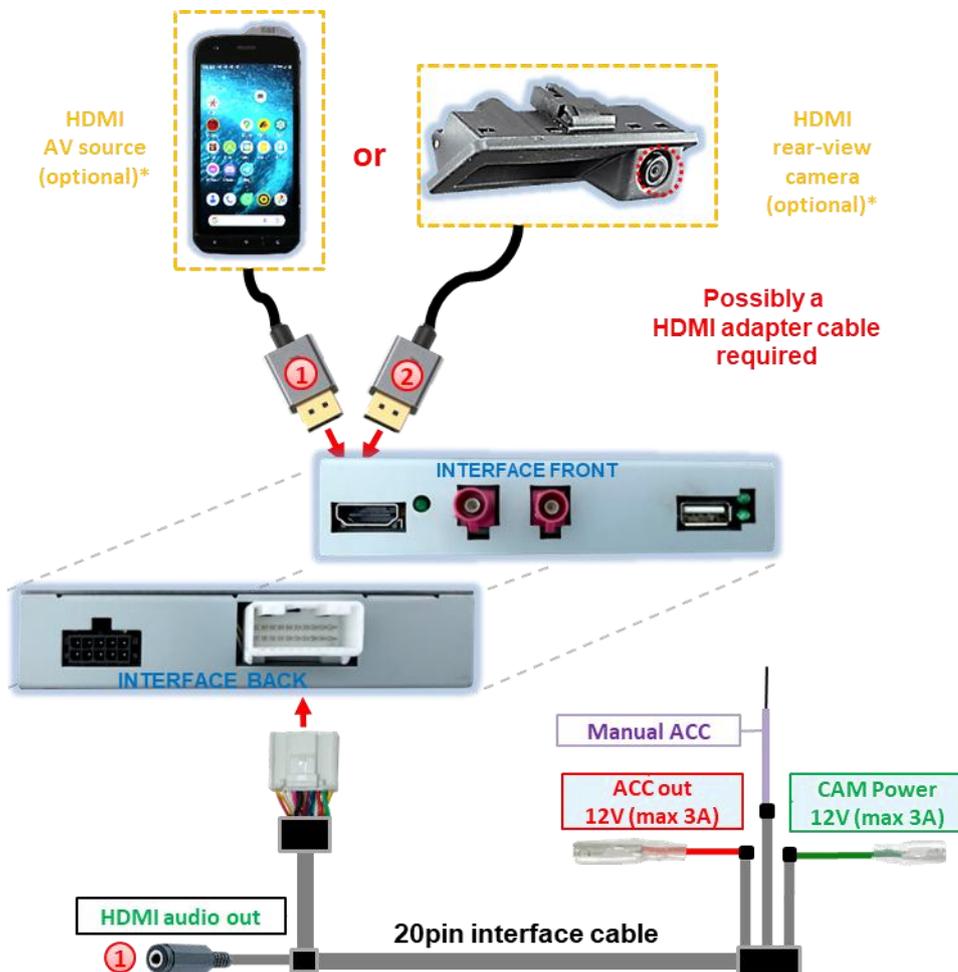

#### Picture settings in the HDMI menu

Menu of HDMI	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	04
PosV	00

#### Picture settings in the HDMI menu for rear-view camera

Menu of HDMI-REVERSE	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear
Guide-Type	Dynamic2
Guide-PosV	37
GuideL-PosH	48
GuideR-PosH	87
Maxim-CURVE	20
External SW	YES
Start-Delay	10s

- 1 If an optional video source is connected to the **HDMI input\***, the picture shown on the display of the source (e.g. smartphone, laptop, etc.) is mirrored on the vehicle monitor. Other sources (e.g. streaming stick, DVD player, DVB-T tuner, etc.) can also be displayed on the vehicle monitor. The video source can be supplied with power via the **red wire ACC out 12V(max3A)**. **HDMI** audio signals are output via the 3.5 mm jack socket **HDMI** Audio out\* of the **20pin** interface cable. See the following chapter 2.10 Audio insertion.
- 2 If a rear-view camera or a 360° camera system is connected to the **HDMI input\*** (activated via CAN bus or analogue), the picture from the rear-view camera is displayed for the preset time while reverse gear is engaged and, after it has been laid out, the picture from a front camera connected to the front camera input **V3-Front** is also displayed. Power can be supplied via the **green wire CAM Power 12V(max3A)**.

\* **HDMI input only available with HDV-MBN7**

### 2.10 Audio insertion


The interface can only insert video signals into the factory infotainment.

Audio signals from the **HDMI input\*** are output via the 3.5mm jack socket **HDMI Audio out\*** of the interface. For all connected AV sources, their audio output must be connected to the factory AUX input (if available) or an optional Audio insertion (e.g. FM modulator). If several AV sources are connected to the infotainment, an additional audio switch may be necessary.

Video signals fed in can be activated in parallel to any audio mode of the factory infotainment system.

**\* HDMI input and HDMI audio out only available with HDV-MBN7**

### 2.11 Connection - video interface and external keypad

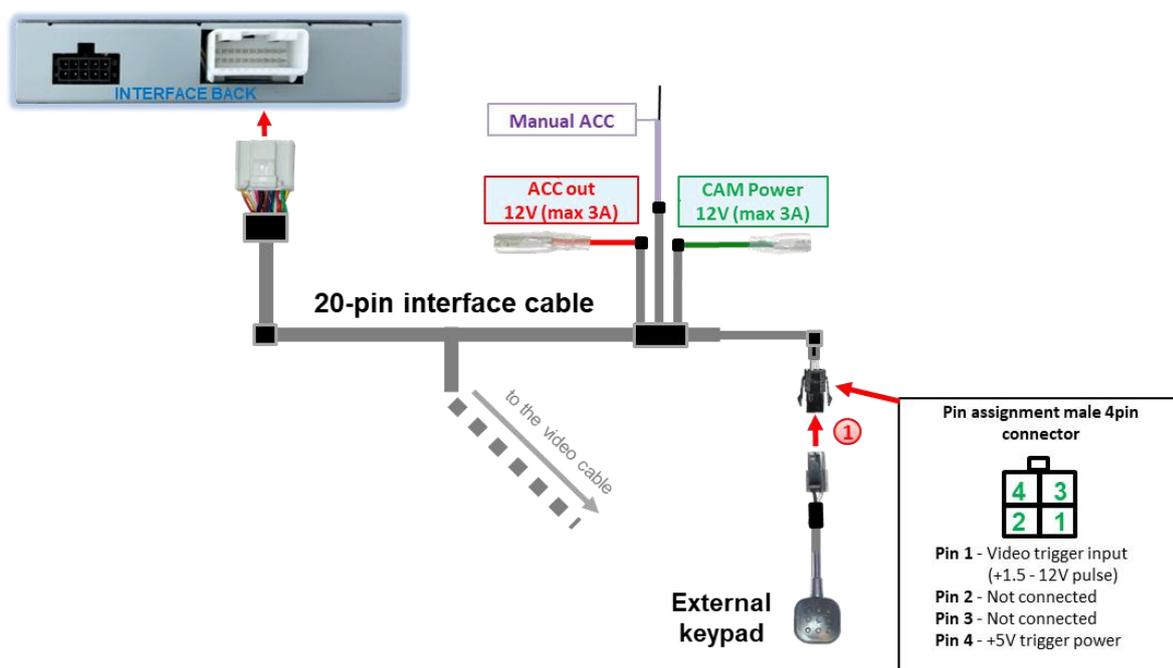

**1** Connect the 4-pin female connector of the external keypad to the 4-pin male connector of the 20pin interface cable.

**Note:** Even if the keypad is not required for switching multiple sources, it is strongly recommended that it is connected to the interface and remains invisible. The keypad should then not be installed "pressed".

**If the camera picture and/or the inserted video or other functions are not working properly, press the external keypad for 10 seconds to reset the interface.**


**Optional:** Instead of the external keypad, the interface can also be operated using the optionally available remote control 'HDA-RC'. This enables direct selection of the video/camera inputs and more convenient changing of settings in the respective OSD menus.

\* The remote control is compatible with all HDA and HDV interfaces that are labelled with 'RC' at the end of the software version.



Remote control 'HDA-RC' optionally available

### 2.12 OSD menu settings

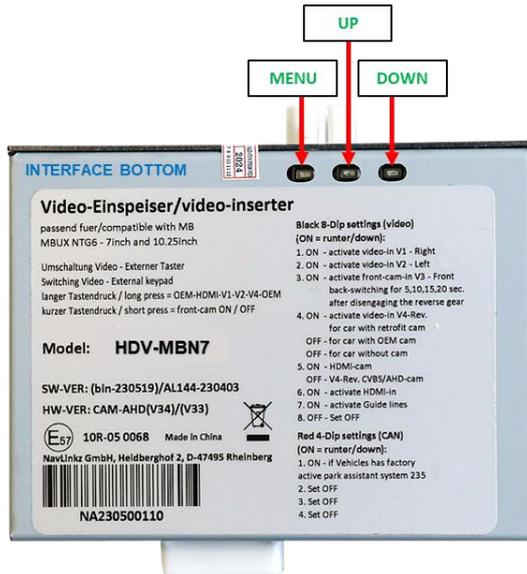

**Attention!**  
Video signal type of each video source must be preset in OSD-menu of corresponding video-input.

OSD menu settings can be changed using the 3 keypads on the back of the interface. MENU opens the OSD settings menu or moves the cursor to the next menu item. UP (UP) and DOWN (DOWN) change the values of the current menu item.



**The individual OSD settings menu of each video input can only be called up while it is displayed, regardless of whether a video source is connected.**

The following setting options are available in the OSD setting menus of the 5 video inputs:

#### Menu **V1-Left (V2-Right)**

8-position switch bench Dip 1 (Dip 2) = ON

**Input Source** Video-signal type for video-source(s) connected to **V1-Left (V2-Right)**. This setting **must** be preset for correct video playback. The following video-source signal types can be selected:  
CVBS video-sources: **NTSC, PAL**  
AHD video-sources: **720p NTSC, 960p NTSC, 1080p NTSC, 720p PAL, 960p PAL, 1080p PAL**

**Brightness** Brightness  
**Contrast** Contrast  
**Pos H** Horizontal image position  
**Pos V** Vertical image position  
**Trigger** Type of selection of video input **V1-Left (V2-Right)**

**"CAN" function for side cameras via CAN bus.** Selection of the video input **V1-Left (V2-Right)** when activating the blink signal left (right). The prerequisite is that the blink signal is recognised by the interface on the vehicle CAN bus. Manual selection of this input using an external keypad does not work with this setting.

**"Wire" function for other video sources or side cameras without CAN bus.** The video input **V1-Left (V2-Right)** is selected exclusively via the **light blue (dark blue) Trig-Left (Trig-Right)** wire or manually via an external keypad.

**Trig-Priority** Switching priority when switching signals are present for multiple inputs simultaneously (CAN bus or analogue +12 V triggers). The signal with the highest priority is displayed:  
**L-R-Rear: V1-Left → V2-Right → V4-Reverse**  
**Rear-R-L: V4-Reverse → V2-Right → V1-Left**

Menu of V1-LEFT	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear

Menu of V2-RIGHT	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear

### Menu **V3 front**      Switch bench of 8 dip switches Dip 3 = ON

**Input Source**    Video-signal type for video-source(s) connected to **V3-Front**.  
 This setting **must** be preset for correct video playback.  
 The following video-source signal types can be selected:

CVBS video-sources:    **NTSC, PAL**  
 AHD video-sources:    **720p NTSC, 960p NTSC, 1080p NTSC, 720p PAL, 960p PAL, 1080p PAL**

**Brightness**    Brightness  
**Contrast**        Contrast  
**Pos H**            Horizontal image position  
**Pos V**            Vertical image position  
**Trigger**         Type of selection of video input **V3 front**.

**"Delay" function for front camera.** The **"Delay"** setting is used to determine the automatic switching of a front camera connected to the V3 **front input** after reverse gear is engaged and its display duration on the display. Available are 5s after REV, 10s after REV, 15s after REV, 20s after REV.

**"Wire" function for other video sources.** If another video source is to be connected to **V3-Front** instead of a front camera, select the **"Wire"** setting. This switches off the **"Delay"** function and the input can only be selected via the **white Trig-Front** wire or manually via an external keypad.

**Trig-Priority**    Switching priority when switching signals are present for multiple inputs simultaneously (CAN bus or analogue +12 V triggers). The signal with the highest priority is displayed:  
**L-R-Rear: V1-Left → V2-Right → V4-Reverse**  
**Rear-R-L: V4-Reverse → V2-Right → V1-Left**

Menu of V3-FRONT	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	10s after REV
Trig-Priority	L-R-Rear

### Menu **V4 reverse** Switch bench of 8 dip switches Dip 4 = ON, Dip 5 = OFF, Dip 6 = OFF

**V4-Reverse** input has no function if **HDMI input\*** is defined as rear-view camera input (Dip 5 = ON).

Menu of V4-REVERSE	
InputSource	720P NTSC
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear
Guide-Type	Dynamic2
Guide-PosV	37
GuideL-PosH	48
GuideR-PosH	87
Maxim-CURVE	20
External SW	YES
Start-Delay	10s

**Input Source** Video-signal type for video-source(s) connected to **V4-Reverse**. This setting **must** be preset for correct video playback.

The following video-source signal types can be selected:

CVBS video-sources: **NTSC, PAL**  
 AHD video-sources: **720p NTSC, 960p NTSC, 1080p NTSC, 720p PAL, 960p PAL, 1080p PAL**

**Brightness** Brightness

**Contrast** Contrast

**Item H** Horizontal image position

**Item V** Vertical image position

**Trigger** Type of selection of rear-view camera input **V4 reverse**.

**"CAN" function with CAN bus connection.** With the "CAN" setting, the system automatically switches to **V4 reverse** for CVBS/AHD rear-view camera when reverse gear is engaged. The interface must recognise the reverse gear in the CAN bus.

**"Wire" function with analogue connection.** The selection of a rear-view camera connected to the **V4 reverse** via the **green Trig-Rear wire** is possible with both the "Wire" and "CAN" settings. It is recommended to set "Wire" for analogue (reversing signal) connection. **8-position switch bench** Dip 4 = ON, Dip 5 = OFF, Dip 6 = OFF

**Trig-Priority** Switching priority when switching signals are present for multiple inputs simultaneously (CAN bus or analogue +12 V triggers). The signal with the highest priority is displayed:

**L-R-Rear: V1-Left → V2-Right → V4-Reverse**  
**Rear-R-L: V4-Reverse → V2-Right → V1-Left**

**Guide Type** Setting 6 different angles of the guide lines for the rear-view camera

Moving guide lines **Dynamic 1-6**  
 Fixed guide lines **Fixed 1-6**  
 No guide lines **OFF**

**Guide Pos. V** Vertical position of the auxiliary wires **00-69**

**Guide L Pos.H** Horizontal position of the left auxiliary wire **00-90**

**Guide R Pos.H** Horizontal position of the right-hand auxiliary wire **00-121**

**Maxim. Curve** Radius of the auxiliary wires **01-20**

**External SW** Selectable via external keypad **V4 Reverse**

**YES:** Factory video → **HDMI\*** → **V1-Left** → **V2-Right** → **V4-Reverse** → Factory video

**NO:** Factory video → **HDMI\*** → **V1-Left** → **V2-Right** → Factory video

**Start-Delay** Switch delay of the interface at start-up. This function is technically necessary in some vehicles, as otherwise the factory system may malfunction (e.g. black screen, touch problems). The following options are available (in seconds):

**5s/6s/7s/8s/9s/10s/12s/15s/20s**

Changing the default settings may cause malfunctions!

\* **HDMI input only available with HDV-MBN7**

**Menu HDMI\*** Switch bench of 8 dip switches (dip 4 = ON, dip 5 = **ON/OFF**, dip 6 = ON)

### HDMI AV input (Dip 5 – OFF)

<b>InputSource</b>	The picture resolution of connected HDMI sources is detected automatically.
<b>Brightness</b>	Brightness
<b>Contrast</b>	Contrast
<b>Item H</b>	Horizontal image position
<b>Item V</b>	Vertical image position

Menu of HDMI	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	04
PosV	00

### HDMI rear-view camera input (Dip 5 = ON)

<b>InputSource</b>	The picture resolution of connected HDMI sources is detected automatically.
<b>Brightness</b>	Brightness
<b>Contrast</b>	Contrast
<b>Pos. H</b>	Horizontal image position
<b>Pos. V</b>	Vertical image position
<b>Trigger</b>	Type of selection of rear-view camera input <b>HDMI-REV.</b>

Menu of HDMI-REVERSE	
InputSource	AutoDetect
Brightness	50
Contrast	50
PosH	04
PosV	00
Trigger	Can
Trig-Priority	L-R-Rear
Guide-Type	Dynamic2
Guide-PosV	37
GuideL-PosH	48
GuideR-PosH	87
Maxim-CURVE	20
External SW	YES
Start-Delay	10s

**"CAN" function with CAN bus connection.** With the "CAN" setting, the system automatically switches to **HDMI\*** for HDMI rear-view camera when reverse gear is engaged. The interface must recognise the reverse gear in the CAN bus.

**"Wire" function with analogue connection.** The selection of a rear-view camera connected to the **HDMI\*** via the **green Trig-Rear wire** is possible with both the "Wire" and "CAN" settings. It is recommended to set "Wire" for analogue (reversing signal) connection.

**Trig-Priority** Switching priority when switching signals are present for multiple inputs simultaneously (CAN bus or analogue +12 V triggers). The signal with the highest priority is displayed:

**L-R-Rear: V1-Left → V2-Right → V4-Reverse**  
**Rear-R-L: V4-Reverse → V2-Right → V1-Left**

**Guide Type** Setting 6 different angles of the guide lines for the rear-view camera

Moving guide lines	<b>Dynamic 1-6</b>
Fixed guide lines	<b>Fixed 1-6</b>
No guide lines	<b>OFF</b>

<b>Guide Pos. V</b>	Vertical position of the guide lines	<b>00-69</b>
<b>Guide L Pos.H</b>	Horizontal position of the left hand guide line	<b>00-90</b>
<b>Guide R Pos.H</b>	Horizontal position of the right-hand guide line	<b>00-90</b>
<b>Maxim. Curve</b>	Radius of the guide lines	<b>01-20</b>

**External SW** Selectable via external keypad **V4 Reverse**  
**YES:** *Factory video → HDMI\* → V1-Left → V2-Right → V4-Reverse → Factory video*  
**NO:** *Factory video → HDMI\* → V1-Left → V2-Right → Factory video*

**Start-Delay** Switch delay of the interface at start-up. This function is technically necessary in some vehicles, as otherwise the factory system may malfunction (e.g. black screen, touch problems). The following options are available (in seconds):

**5s/6s/7s/8s/9s/10s/12s/15s/20s**

Changing the default settings may cause malfunctions!



**Notes:** **V4-Reverse** input has no function if the **HDMI input\*** is defined as a rear-view camera input (dip 5 = **ON**).

\* **HDMI input only available with HDV-MBN7**

## 3 Operating the video interface

The external keypad can be used to switch all activated inputs and to reset the Interface.

➤ Long press of the keypad (2-3 seconds)

The external keypad switches from factory video to the first activated interface video input with a long press (2-3 seconds). Each further long press switches an activated interface video input until the last press switches back to factory video. Deactivated inputs are skipped. If all inputs are activated using the corresponding dip switch, the sequence is as follows:

Factory picture → **HDMI\*** → **V1-Left** → **V2-Right** → **V4-Reverse\*\*** → Factory picture

\* **HDMI input only available with HDV-MBN7**

\*\***V4-Reverse** can only be selected via the external keypad if the "External SW" function is set to "Yes" in the **V4-Reverse** menu.

➤ Briefly press the keypad (only possible if dip 3 is ON)

The external keypad switches from the current video mode to the front camera input when pressed briefly.

input V3-Front and back to the previous video mode when pressed briefly again .



**Note:** Even if the keypad is not required for switching multiple sources, it is strongly recommended that it is connected to the interface and remains invisible.

The keypad should then not be installed "pressed".

➤ Press and hold the keypad for 10 seconds

If the camera picture and/or the inserted video or other functions are not working properly, press the external keypad for 10 seconds to reset the interface.

### 3.1 Optional: Operating the video interface via the 'HDA-RC' remote control

Instead of the external keypad, the interface can also be operated using the optionally available 'HDA-RC' remote control.\* This allows direct selection of the video/camera inputs and more convenient changing of settings in the respective OSD menu.



Remote control 'HDA-RC'  
optionally available

\* The remote control is compatible with all HDA and HDV interfaces that are labelled with 'RC' at the end of the software version.

## 4 Specifications

BATT/ACC range	9V - 16V
Stand-by power drain	about 2mA
Power consumption	400mA @12V
Video input	0.7V - 1V
Video input signal types	CVBS/AHD/HDMI <b>(HDV version only)</b>
Signal standards CVBS/AHD	NTSC/PAL
Temperature range	-40°C to +85°C
Video box dimensions	117 x 25 x 109 mm (W x H x D)

## 5 FAQ - Troubleshooting Interface functions - product-specific

Problem	Possible cause	Solution
Distorted or no inserted video	Video-signal type of video-source not defined in OSD-menu of the corresponding video input	See chapter 2.12 <i>OSD menu settings</i> - Menu of the respective input

## 6 FAQ - Troubleshooting Interface functions - general

For any troubles which may occur, check the following table for a solution before requesting support from your vendor.

Symptom	Possible reason	Possible solution
No picture/black picture (factory picture).	Not all connectors have been reconnected to factory head-unit or monitor after installation.	Connect missing connectors.
	CAN-bus wires connected to CAN-bus in wrong place.	Refer to the manual where to connect to the CAN-bus. If not mentioned, try another place to connect to the CAN-bus.
	No power on video-interface (all LED video-interface are off).	Check power connection of interface.
No picture/black picture/white picture (inserted picture) but factory picture is OK.	No picture from video source.	Check on other monitor whether video source is OK.
	No video-source connected to the selected interface input.	Check settings dips 1 to 5 of 8dip bench of video interface which inputs are enabled and switch to corresponding input(s).
	Setting of video signal type of active video input is not equal to video signal type of connected video-source.	Set the video signal type of the video source correctly in the OSD menu of the corresponding input.
	LVDS cables plugged in wrong place.	Double-check whether order of LVDS cables is exactly connected according to manual. Plugging into head-unit does not work when the manual says to plug into monitor and vice versa.
	Wrong settings of video-interface.	Verify the vehicle-specific dip switch position in the instructions. If necessary, test different positions of the vehicle-specific dip switches. Perform a power reset after each change (briefly remove the black 10-pin micro-fit power socket once).
Inserted picture totally wrong size or position.	Wrong settings of video-interface.	Verify the vehicle-specific dip switch position in the instructions. If necessary, test different positions of the vehicle-specific dip switches. Perform a power reset after each change (briefly remove the black 10-pin micro-fit power socket once).
Inserted picture double or multiple times on monitor.		
Inserted picture distorted, flickering or running vertically.	Video sources output set to AUTO or MULTI which causes a conflict with the interfaces auto detection.	(Only concerns video-sources with selectable output – e.g., DVD-Players, TV-Tuners, etc.) Set video source output fixed to PAL or NTSC. It is best to set all video sources to the same video signal type output.
	If error occurs only after source switching: Connected sources are not set to same video signal type output.	Set all video sources to the same video signal type output.
	Setting of video signal type of active video input is not equal to video signal type of connected video-source.	Set the video signal type of the video source correctly in the OSD menu of the corresponding input.
Inserted picture b/w.	Setting of video signal type of active video input is not equal to video signal type of connected video-source.	Set the video signal type of the video source correctly in the OSD menu of the corresponding input.

Symptom	Possible reason	Possible solution
Only on first inserted video activation after IGN on, the inserted picture is distorted.	Menu item <i>Trigger</i> of the corresponding video-input is set to <i>CAN-bus</i> though analogue signal triggering is used.	Open OSD-menu of corresponding video input and set the menu item <i>Trigger</i> to <i>Wire</i> .
Inserted picture qual. bad.	Picture settings have not been adjusted.	Use the 3 switches on interface-box or optional HDA-RC cable remote control to set the desired picture settings for the respective video source in the OSD menu of the interface.
Inserted picture size slightly wrong.		
Inserted picture position wrong.		
Camera input picture flickers.	Camera is being tested under fluorescent light (neon).	Test camera under natural light outside the garage.
Camera input picture is bluish.	Protection sticker not removed from camera lens.	Remove protection sticker from lens.
Camera input picture black.	Camera power taken directly from reverse gear lamp.	Use relay or electronic filter to "clean" reverse gear lamp power. Alternatively, camera power can be taken from green wire CAM Power.
Camera input picture has distortion.		
Switching to inserted video does not work after IGN on or vehicle startup- temporary.	Interface has a start-up delay during which, after interface start-up for certain time, there is no switching to inserted video. Required to prevent the factory system from crashing.	In OSD menu of V4, default delay can be shortened time in menu item <i>StartDelay</i> , this might especially make sense on installations without connection to CAN-bus. Note: Too short <i>StartDelay</i> setting can cause (sporadically) black-screen of factory picture or loss of factory touch-screen control.
Not possible to switch video sources by OEM button.	Function not supported in this vehicle.	Use external keypad for AV-switching.
Not possible to switch video sources by external keypad.	Pressed too short.	For video source switching a longer press of about 2.5 seconds is required.
	Video-input is not enabled.	Enable corresponding inputs (dips 1 to 5 of 8dip bench).
Interface does not switch to reverse camera input when reverse gear is engaged or does not switch to side camera input(s) when turn signal in on.	CAN-bus of vehicle not fully compatible with interface. Function not supported.	Follow the manual for R-gear signal or turn signal from analogue signal.
	Menu item <i>trigger</i> in the OSD of the video-input was set to <i>Wire</i> .	Switch on corresponding input by external button or 12V to corresponding trigger input. Open OSD-menu of corresponding video input and set the menu item <i>Trigger</i> to <i>CAN bus</i> .
OSD-menu of interface cannot be accessed/opened.	No inserted video input of interface is active, factory picture is displayed.	Each video input of interface has its own OSD with its own settings. The OSD for each input can only be opened when the input is displayed.

## 7 Technical Support

Please note that direct technical support is only available for products purchased directly from NavLinkz GmbH. For products bought from other sources, contact your vendor for technical support.

**For any support requests make sure to at least prepare:**

- Product code and serial number of all involved products
- Vehicle data such brand, model, year of production, VIN, infotainment model

**NavLinkz GmbH**  
**Distribution/Tech dealer-support**  
Heidberghof 2  
D-47495 Rheinberg

Tel +49 2843 17595 00

Email [mail@navlinkz.de](mailto:mail@navlinkz.de)



10R-06 5485



Made in China